

Package Content

- POE-48TU
- POE-48PB
- Quick Installation Guide

Installation Steps

- Connect **Power In** of POE-48PB to power plug, and “Power” LED will be on.
- Connect **Data In** of POE-48PB to LAN.
- Switch the voltage value of POE-48TU to right value.
- Connect **Data In + Power In** port of POE-48TU to **P+DATA OUT** port of POE-48PB by using POE cable. Please make sure that “Power” LED of POE-48TU is on.
- Connect power jack of the network device to **Power Out** port of POE-48TU via power cable, and connect RJ-45 port of the network device to **Data Out** port of POE-48TU.
- Check whether the network device is on. If not, please make sure that power is on for POE-48PB and POE-48TU, and the cable is connected well.

